

Greenplate BBQ Dipswitch Settings - Post June 2021


This document is for use with BBQ's and PCB's sold post June 2021.

Note: When changing the dipswitch settings please ensure the BBQ unit has been depowered.

Push to Start Option - Thermocouple BBQ

Dipswitch 1 needs to be set in the ON position. Dipswitches 2, 3 and 4 are to be set in the OFF position.


This feature will require the user to start the BBQ by pushing the BBQ Switch once.

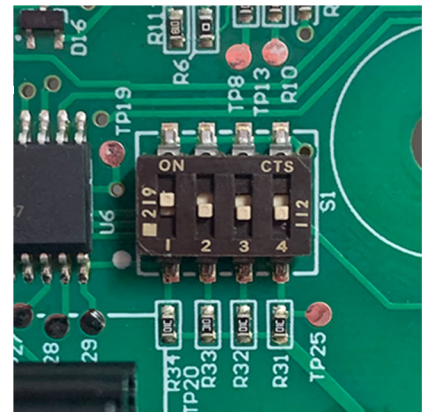

6 Second Delay Option - Thermocouple BBQ

Dipswitches 1 and 2 need to be set in the ON position. Dipswitches 3 and 4 need to remain in the OFF position.


This feature will require the user to push and hold the BBQ Switch for 6 seconds before the BBQ will start. Greenplate BBQs are supplied with this feature as standard.

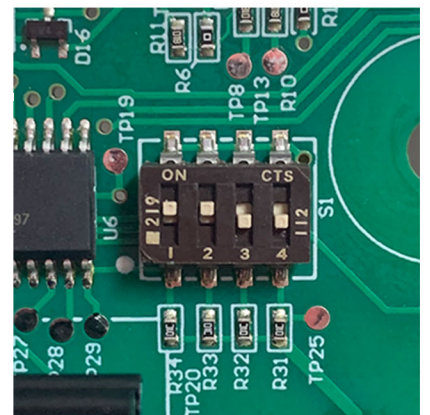

Continuous Operation - Thermocouple BBQ

All dipswitches are to be set in the OFF position.

This removes the function of the BBQ switch, the BBQ will start as soon as power is applied to the unit. The switch will still show the red and green LEDs indicating when the BBQ is heating or if it has reached temperature.

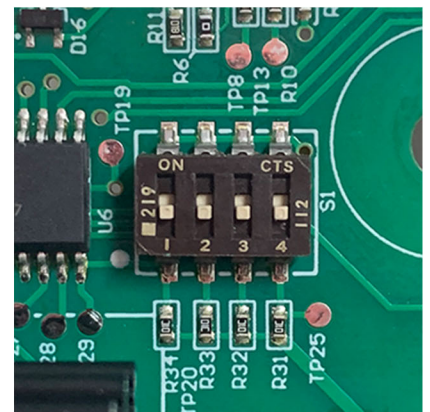

A: Unit 2/15 Natasha Street Capalaba QLD 4157

P: 07 3245 3008

F: 07 3245 3009

E: info@greenplate.com.au

W: www.greenplate.com.au

Copyright © 2021 Greenplate Pty Ltd

Greenplate BBQ Dipswitch Settings - Post June 2021

 
This document is meant for use on BBQ's and PCBs sold post June 2021.

Note: When changing the dipswitch settings please ensure the BBQ unit has been depowered.

Push to Start Option - Thermostat BBQ

Dipswitches 1 and 3 need to be set in the ON position.
Dipswitches 2 and 4 are to be set in the OFF position.


This feature will require the user to start the BBQ by pushing the BBQ Switch once.

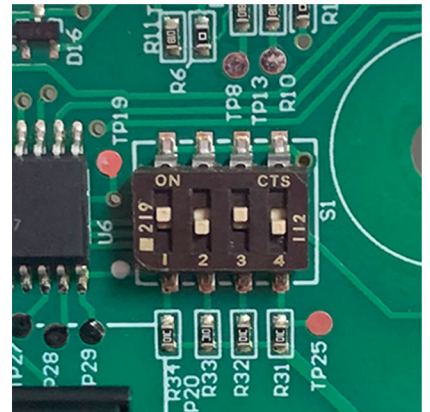

6 Second Delay Option - Thermostat BBQ

Dipswitches 1, 2 and 3 need to be set in the ON position.
Dipswitch 4 needs to remain in the OFF position.

 
This feature will require the user to push and hold the BBQ Switch for 6 seconds before the BBQ will start. Greenplate BBQs are supplied with this feature as standard.

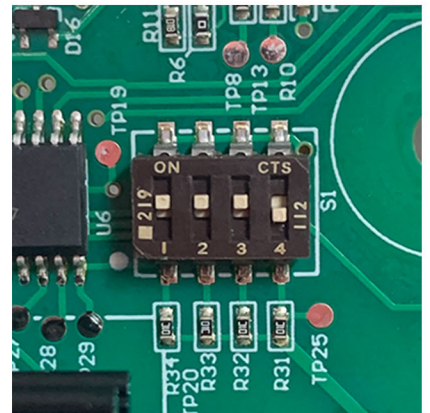

Continuous Operation - Thermostat BBQ

Dipswitches 1, 2 and 4 are to be set in the OFF position.
Dipswitch 3 needs to be set to the ON position.

 This removes the function of the BBQ switch, the BBQ will start as soon as power is applied to the unit. The switch will still show the red and green LEDs indicating when the BBQ is heating or if it has reached temperature.

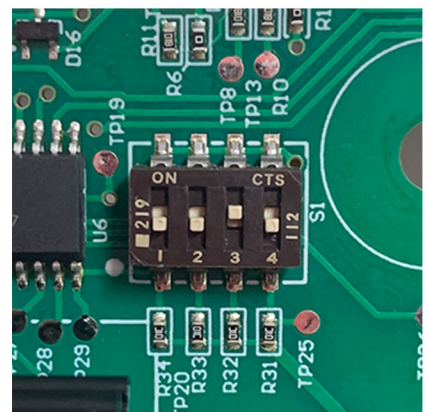

A: Unit 2/15 Natasha Street Capalaba QLD 4157

P: 07 3245 3008

F: 07 3245 3009

E: info@greenplate.com.au

W: www.greenplate.com.au

Copyright © 2021 Greenplate Pty Ltd